



1- Recall Defaults - RESET USINE

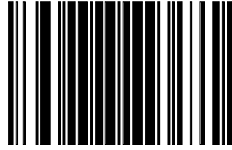

999998


1 / 5

2. Enter Program Mode

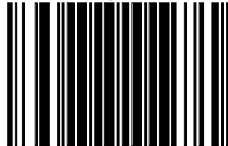

999999111


3 - Send Numbers as keypad

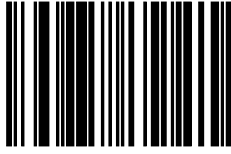


3 1 1 6 3 1 6

2/5

4 - Exit Program Mode

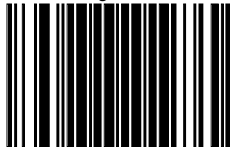


5. Enter Program Mode

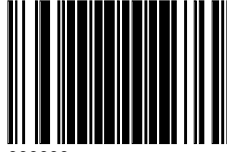


999999

3/5

6 - Minimum Symbol Length

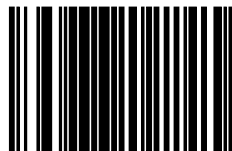

7 - Code Byte 0

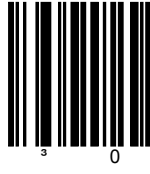


4/5

8 - Code Byte 0



9 - Code Byte 1

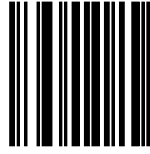

3 1

5/5

10 - Exit Program Mode

